



Diaphragm seal MD 60 for hygienic processes



Benefits

- 3-A-certified in conjunction with Bourdon tube pressure gauge RF 63/100 and chemical seal DMU 02 Vario
- All materials FDA-listed
- SIP/CIP enabled
- NovAseptic®-compatible (1" up to 2½")

Application

For mounting to Bourdon tube pressure gauges, pressure transducers or pressure switches. For viscous, perishable or hot media. Typical application areas:

- Food and beverages industry
- Beverages industry
- Pharmaceutical industry
- Biotechnology

Versions

Clamp ISO 2852

	Process connection	Instrument connection	Nominal pressure	Minimum range* (in bar) at nominal size				Part no.
				63	100	160	DMU	
	¾"	Welded connection	PN 40	6 bar	–	–	1.6 bar	31913W
	1"	Welded connection	PN 40	–	–	–	1.6 bar	31914W
	1"	Welded connection	PN 40	4 bar	4 bar	–	1 bar	31912W
	1½"	Welded connection	PN 40	0.6 bar	0.6 bar	1.6 bar	1 bar	31324W
	2"	Welded connection	PN 40	0.6 bar	0.6 bar	0.6 bar	0.6 bar	31325W
	2½"	Welded connection	PN 25	0.6 bar	0.6 bar	0.6 bar	0.6 bar	31326W

Blue part no. = in-stock items



Description

All materials used are FDA-listed. The chemical seal and the measuring instrument are welded together, resulting in an inseparable single, shock- and vibration-resistant unit that does not require additional external protection. The chemical seals are available with various nominal diameters; due to their compact design, they are suitable for a wide range of applications.

Technical specifications

Process connection

Stainless steel 316 L
Clamp ISO 2852

Diaphragm

Stainless steel 316 L
Welded to upper body, no dead space

Surface roughness R_A

$\leq 0.8 \mu\text{m}$

Instrument connection

Welded connection

Pressure transmission liquid

Paraffin oil (FM 09), FDA-listed

Pressure range

See ordering table

Nominal pressure

PN 40, PN 25

Test

3-A-certified

Nominal diameter 1"– For 63/100 (crimped bezel/bayonet bezel

2½": versions)

Nominal diameter 1"– For DMU 02 Vario

2½":


Options

- Adapter for instrument connection G $\frac{1}{4}$ B/G $\frac{1}{2}$ B
- Special materials/coatings
- Electropolished
- Cooling element ($> 100 \text{ }^{\circ}\text{C}$)
- Capillary tube
- Other filling liquids
- Accessories (retainer ring, seal, socket)
- Other process connections:
 - MD 61: Clamp DIN 32676
 - MD 62: Tri-Clamp




Technical drawings

Type MD 60 - clamp connection 3/4" ISO 2852

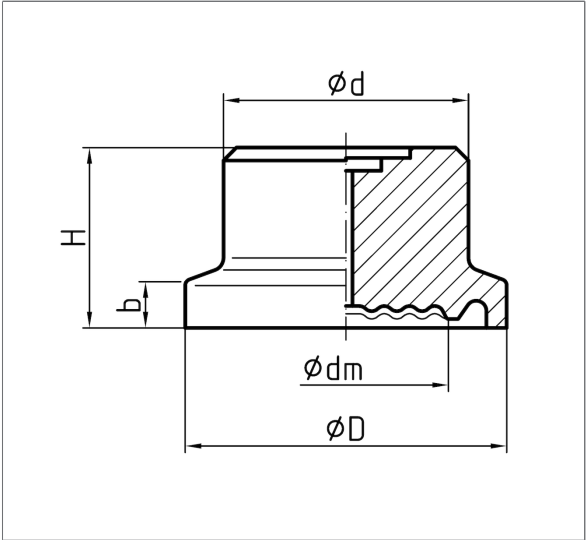


DN	PN	D	dm	d	H	b
3/4"	40	25	17,2	19	14	3,6

Type MD 60 - clamp connection 1"-2 1/2", ISO 2852

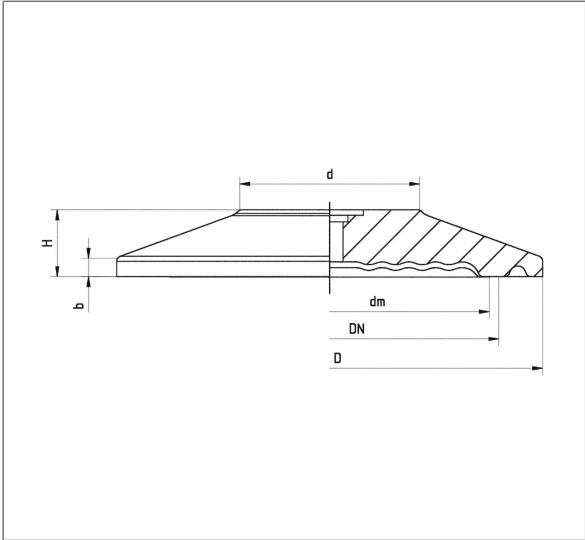

DN	PN	D	dm	d	H	b
1"	40	50,5	23,5	27	10	2,85
1 1/2"	40	50,5	36	27	10	2,85
2"	40	64	48	27	10	2,85
2 1/2"	25	77,5	48	38,2	10	2,85

Adapter for instrument connection G 1/4/G 1/2 with filling port

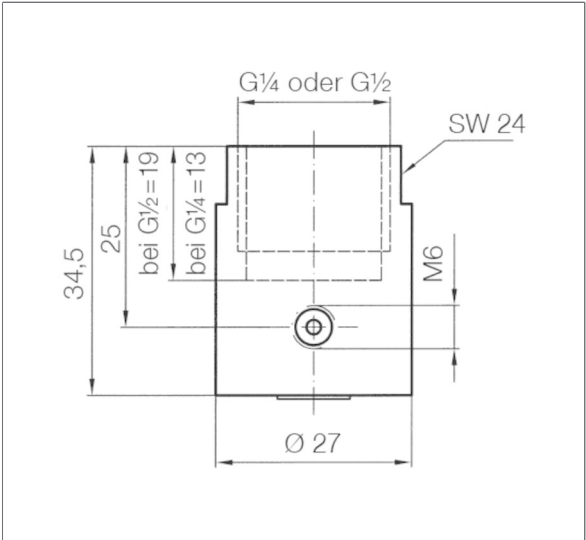

Cooling element, can be welded at both ends

